

 **Müller**
AUSTRIA

Portable HEATER

MH 700



INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS BEFORE USING THIS HEATER

IMPORTANT INSTRUCTIONS

WHEN USING ELECTRICAL APPLIANCES, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND PERSONAL INJURY, INCLUDING THE FOLLOWING:

When switching on the appliance for the first time, allow it to run at full power for about two hours to get rid of the unpleasant smell. Make sure that the room in which the appliance is located is well ventilated during this operation. It is normal for the appliance to emit small cracking sounds when you turn it on for the first time.

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handle when moving the unit. Keep flammable materials such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front and top of the heater and keep them away from the sides and rear of the heater. Keep the rear grille away from walls or drapes, so you don't block the air intake.
3. Extreme caution and supervision are necessary when any heater is used near children or invalids, and whenever the heater is left operating and unattended.
4. Always unplug heater when not in use.
5. Do not use any heater with a damaged cord or plug or after the heater malfunctions or has been dropped or damaged in any manner. Discard heater or return to an authorized service facility for examination and/or repair.
6. Do not use outdoors.
7. This heater is not intended for use in bathrooms, laundry areas, or other similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic areas and place it where it will not be tripped over.
9. To disconnect the heater, turn controls to OFF (0 znak), then remove the plug from outlet.
10. This appliance has a polarized plug (one blade is wider than the other). This plug is intended to fit a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, consult a qualified electrician. Do not connect the heater to extension cords, surge protectors, timers, direct breakers, or an outlet with other appliances connected to the same outlet. Risk of fire, overheat, malfunction, property damage, injury, or even death may result if not adhered to!

11. Do not insert or allow foreign objects to enter ventilation or exhaust openings, as this may cause an electric shock or fire, or damage the heater.
12. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
13. A heater has hot and sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
14. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, injury to persons or other damage to property.
15. This heater must be plugged into a 120V, 15 amp (or more) circuit of its own. Nothing else can be plugged into the same circuit. If unsure if your home meets this specification, consult a certified electrician prior to use. Risk of fire, overheat, malfunction, property damage, injury, or even death may result if not adhered to!
16. To prevent overload and blown fuses, be sure that no other appliance is plugged into the same outlet or into another outlet wired into the same circuit.
17. It is normal for the heater's plug and cord to feel warm to the touch. The plug or cord that becomes hot to the touch or becomes distorted in shape may be a result of a worn electrical outlet. Worn outlets or receptacles should be replaced prior to further use of the heater. Plugging the heater into a worn outlet/receptacle may result in overheating of the power cord or fire.
18. Ensure the heater is on a stable, secure surface to eliminate the potential of tipping over.
19. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet /power strip).
20. Be sure that the plug is fully inserted into an appropriate receptacle. Please remember that receptacles also deteriorate due to aging and continuous use: check periodically for signs of overheating or deformations evidenced by the plug. If any abnormalities on the receptacles are spotted, do not use the heater and call your electrician.
21. Check that neither the appliance nor the power cable has been damaged in any way during transportation.
22. Make sure that no pieces of polystyrene or other packaging material have been left between elements of the appliance. It may be necessary to pass over the appliance with a vacuum cleaner.
23. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

SAVE THESE INSTRUCTIONS

PET OWNERS WARNING:


Some small pets, including birds, are susceptible to the fumes produced during the first-time use of many appliances. These fumes are not harmful to humans, but we recommended that you do not use your heater around birds and small pets during its first use until the manufacturing corrosion (anti-corrosion) coatings burn off.

OPERATIONS INSTRUCTIONS

Be sure to plug into a 120V AC, 60Hz outlet.

This heater is equipped with a **thermostat control dial** and **power control dial**.

Control Panel

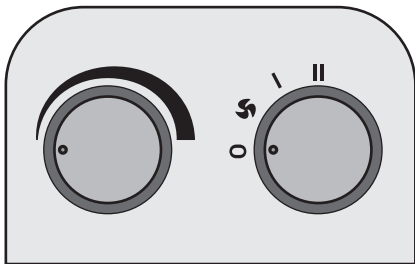

Symbol	Function
○	Power off
☪	Fan only
I	Low heat (750 W)
II	High heat (1500 W)

Rotate the thermostat control dial clockwise fully.

Set the power control dial to "II" setting for the fast warm-up of a room.

Select "I" setting to prevent the room from becoming too warm.

Turn the power control dial to "☪" setting for fan operation only.

TEMPERATURE SETTING (THERMOSTAT):

Adjust the thermostat control dial **clockwise to maximum (+)** and select the desired power setting. Once the room is comfortable, rotate the thermostat **counterclockwise to (-)**, until the heater shuts off. The thermostat will now maintain the temperature by cycling the heater on or off. During cold weather, the low power setting may be insufficient to satisfy the thermostat. You may select a higher setting for these periods.


PROTECTION SYSTEMS

OVERHEAT PROTECTION

This heater includes an overheat protection system that shuts the unit off when parts of the heater overheat. If this occurs, turn the heater off, unplug it, and inspect and remove any objects on or adjacent to the heater that may cause high temperatures. Wait 10 to 20 minutes for the unit to cool down then plug it back in and resume the normal operation.

TIP-OVER SWITCH

Your heater is equipped with a tip-over switch, which is designed to shut off the unit when tipped forward or backward. When returned to normal upright position, the heater will automatically come on again. This is a safety feature, made to avoid possibility of fire should the unit be accidentally tipped over.

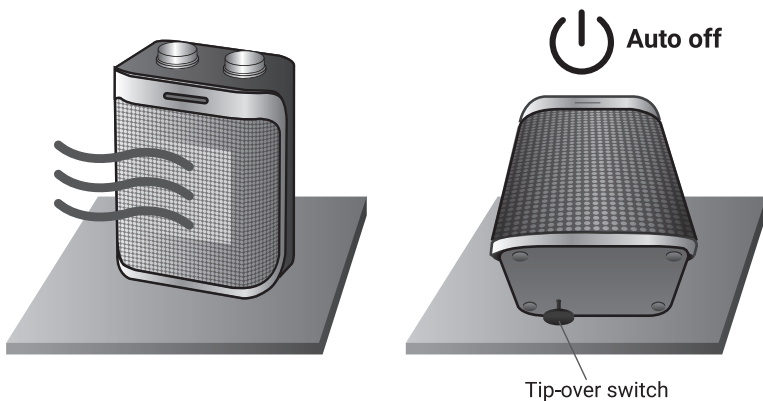

POWER INDICATOR LIGHT

This heater is equipped with a power indicator light. The power light will illuminate when the heater is turned on.

CLEANING AND MAINTENANCE

1. Before any cleaning, make sure that:

- a. The heater is turned OFF
- b. Disconnect power supply at source by removing plug from power outlet.

2. Regular cleaning:

- a. Interior dust can often be removed by using a vacuum cleaner with a crevice tool attachment.
- b. Do not use cleaning spray-on liquids or other chemicals on the unit.
- c. To clean enclosure, use a clean, soft and lightly damp cloth to gently wipe off the dirt from the surface of the unit. Be sure not to wet the heating element and the switches. Allow the unit to dry completely before using it.

! CAUTION: DO NOT ALLOW WATER TO RUN INTO THE INTERIOR OF THE HEATER AS THIS COULD CREATE A FIRE OR ELECTRIC SHOCK HAZARD.

STORAGE

1. Perform the cleaning procedures described in “CLEANING AND MAINTENANCE” section.
2. Wipe all parts to dry.
3. Pack the heater in a plastic bag and store it in a cool, dry place.

TROUBLESHOOTING

If your heater fails to operate, please follow these procedures prior to contacting Customer Service.

Problem	Probable Cause	Solution
The heater will not turn on	The heater is not plugged into a 120V polarized outlet/receptacle.	Ensure unit is in OFF position. Plug in the unit and attempt to turn on again.
	The thermostat control dial is not turned ON.	Rotate the power control dial from the OFF position. Then turn the thermostat control dial clockwise entirely.
	Breaker/Fuse has been tripped.	Please check your electrical box to confirm the breaker has not been blown. This may occur if the unit is sharing a receptacle with another high power-consuming appliance. Ensure unit is in OFF position. Plug in the unit and attempt to turn it on again. Attempt to plug unit into another independent output in the house.
Unit is not heating	The temperature of the room has reached the temperature of thermostat settings.	To resume heating, adjust thermostat temperature to a higher setting. Refer to THERMOSTAT section on page 4 for more information.
The heater is creating a burning smell.	A drop of oil fell on the heating coil during the manufacturing process. It will quickly evaporate and should not occur again.	Ensure the room in which heater is situated is well ventilated.
	Check & ensure there are no combustible materials within 3' (0.9 m) of the heater.	Remove the combustible materials preventing air intake into the heater.

PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE HEATER YOURSELF, DOING SO COULD VOID THE WARRANTY AND CAUSE DAMAGE OR PERSONAL INJURY.



1-Year Limited Warranty

This product is warranted to be free from defects in material and workmanship under normal use and service for 1 year from the date of original purchase with receipt. The manufacturer's obligation shall be limited to repairing or replacing, any part of the product that is defective. Such warranty shall not apply to damages resulting from accidents, abuse or misuse.



Your purchase comes with a 100% satisfaction guarantee from Müller

*If you are not happy with the product for any reason, please contact us at support@muellerdirect.com or at **888-632-9981** with your feedback or questions, and we will do our best to make things right for you!*



Müller USA

🏠 1714 Franklin St, Ste B3, Oakland, CA 94612

☎ Telephone: (888) 632-9981

✉ E-mail: support@muellerdirect.com

🌐 Web: www.muellerdirect.com