

 **Müller**
AUSTRIA

UltraBlade Pro

UB110



INSTRUCTION MANUAL

IMPORTANT SAFETY INSTRUCTIONS



When using an electric product, basic precautions should always be followed, including the following:

Read all instructions before using this product.

DANGER

To reduce the risk of electric shock:

- Do not reach for a product attached to a power cord, that has fallen into water. Unplug immediately.
- The power cord and the accessories connected to it are not for immersion or for use in shower.
- Do not use an extension cord with this product.
- Do not place or store the product while plugged in where it can fall or be pulled into a tub or sink. Do not place or drop the product or the power cord in water or other liquid while plugged in.
- Always unplug this product from the electrical outlet immediately after (re)charging.
- Unplug and remove power supply cord from this product before cleaning.
- The batteries used in this product may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100°C (212°F) or incinerate.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

- Close supervision is required when this product is used by, on, or near children, or persons with limited physical, sensory, or mental capabilities or invalids.
- Use this product for its intended household use as described in this manual. Do not use attachments not recommended by Mueller.

- Never operate this product if it has a damaged power cord, if it is not working properly, after it has been dropped or damaged, or dropped into water while plugged in. For assistance contact Mueller support.
- Keep the product, power cord, and any attachments away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not use the adapter in or near a power outlet that contains an electric air freshener to prevent damage to the power cord.
- Do not operate, charge, clean or plug in product outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Always check blade and comb before using the product. Do not use the product if blade or comb are damaged, as injury may occur.
- Always attach power cord to product first, then to power outlet. To disconnect, turn product off then remove power cord from outlet.
- Keep the power cord dry at all times. Do not handle with wet hands.
- Never put the product or the power cord in direct sunlight or store at a temperature above 140°F (60°C).
- To prevent possible damage to the power cord, do not wrap power cord around the product.
- This product is for use on human hair only. Do not use the product for any other purpose.
- Always store the product, attachments and power cord in a moisture-free area. Make sure the cord is disconnected from the product.
- Do not attempt to open the product to remove or replace the built-in rechargeable battery.
- Only use the power cord and other accessories supplied with the product.

SAVE THESE INSTRUCTIONS



INTRODUCTION

Thanks for purchasing the Mueller UltraBlade Pro UB110! To fully benefit from the support that Mueller offers, register your product at register@muellerdirect.com.

Your purchase comes with a 100% satisfaction guarantee from Mueller.

If you are not happy with the product for any reason, please contact us at support@muellerdirect.com or at **888-632-9981** with your feedback or questions, and we will do our best to make things right for you!

PARTS

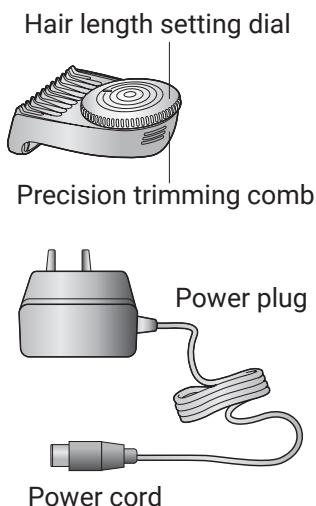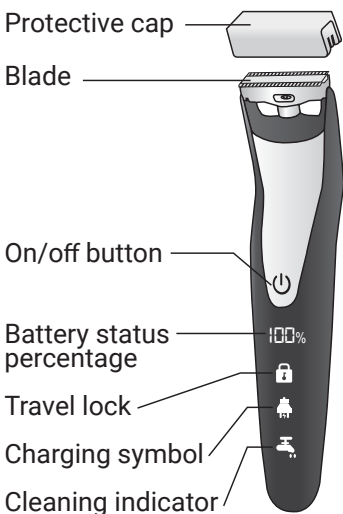

This symbol indicates that the product can be used in the bath or shower.

CHARGING


Charging takes approx. 1 hour. Charge the product before first use and when the battery status reaches low percentage.

Charging or using the product at temperatures below 40°F (4,5°C) or higher than 95°F (35°C) adversely affects the lifespan of the battery.

If the product is subjected to a major change in temperature, pressure or humidity, let the product acclimatize for 30 minutes before use.

Battery status indications

When the battery reaches 10%, the battery status percentage symbol starts blinking.

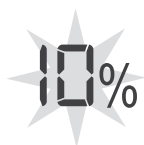

- The remaining battery capacity is indicated by the battery status percentage on the display.

- When the product is charging, the charging symbol blinks white.



- Quick charge: after approx. 5 minutes of charging, the product contains enough energy for about 8 minutes of use. During quick charge the charge symbol blinks white quickly until quick charge is finished.



- When the battery is fully charged, the battery status percentage shows 100%.




This product is for cordless use only. Do not use it while being charged.

Charging your shaver


1. Make sure the product is switched off.



2. Insert the power cord into the product and put the power plug in any 120-240V AC outlet.

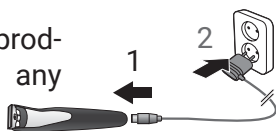

3. After charging, remove the power plug from the wall outlet and pull the power cord out of the product.

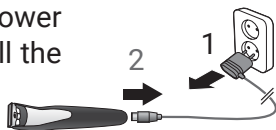

Operating time

When the product is fully charged, it has a cordless operating time of up to 60 minutes.



USING THE PRODUCT

Always check the product and all accessories before using. Do not use the product or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

This product is for use on facial hair only. It is not intended for shaving, edging or trimming hairs on lower body parts or scalp hair.

Note:

This product is for cordless use only.



- Use this product for its intended household use as described in this manual.
- For hygienic reasons, the product should only be used by one person.
- Before using the product, always check the blade for damage or wear. If the blade is damaged or worn, do not use the product, as injury may occur. Replace a damaged blade before you use the product (see 'Replacement').
- Use the product to trim, edge or shave facial hair (beard, mustache and sideburns). Shave for a smooth result, trim to obtain a certain length and edge to create perfect edges and sharp lines. Take your time when you first start using the product. You have to acquire practice with the product.
- This product is water resistant. It is easy to clean- just rinse it under the tap water. You can shave dry or wet with foam, (it's fit to use in the shower).
- Trimming is easier when the skin and hair are dry.
- Be careful when trimming without a comb as the product will trim every hair it touches when it is turned on.

Turning the product on and off

1. Press the on/off button once to turn the product on or off.




Shaving

1. Switch on the product. 

2. Place the surface of the blade flat against your skin. Make sure that the surface of the blade is in full contact with the skin.



3. Move the product up or against the grain in long strokes while pressing lightly.

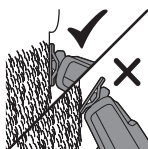

4. Switch off and clean the product after every use (see 'Cleaning').



- Use the product dry or wet with gel or foam, even in the shower.

- Shaving a clean beard and face gives the best results.

Edging

1. Switch on the product. 

2. Place the edge of the blade perpendicular onto the skin. You can use one or both edges of the blade to create sharp lines and perfect edges. Hold the product in such a way that the blade is perpendicular to the skin and one or both of its edges touches the skin.

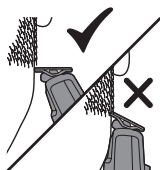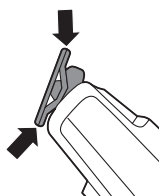

This allows more precise detailing of sideburns and the area around the mouth and nose.

4. Make straight strokes while applying gentle pressure.


5. Switch off and clean the product after each use (see 'Cleaning').




Trimming with comb

- The precision trimming comb allows you to trim hair to different lengths. When you trim for the first time, start at the highest length setting to familiarize yourself with the product.

- The settings on the dial correspond to the remaining hair length after trimming in millimeters. You can select a length from 1mm (0.04") to 10mm (0.4")

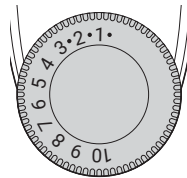

- Always trim in the direction of the teeth of the precision trimming comb making sure the flat part of the comb is in full contact with the skin for an even trimming result.

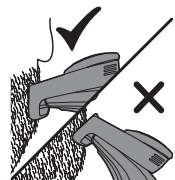


- Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e. upwards, downwards, or across). Practice is best for optimum results.


- Make sure to always move the product against the grain.


- Trimming is easier when the skin and hair are dry.

1. Place the front part of the comb onto the blade and push the dial down at the back of the comb into the product ('click').

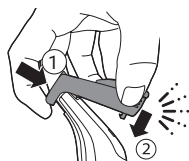


2. Turn the hair length setting dial to select the desired hair length setting. The settings on the dial correspond to the remaining hair length after trimming. You can select a length from 1mm (0.04") to 10mm (0.4").

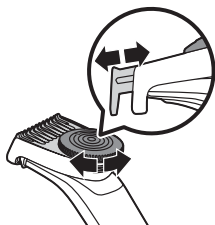


3. Switch on the product. 

4. Place the comb onto the skin and move the product upwards slowly, against the grain.

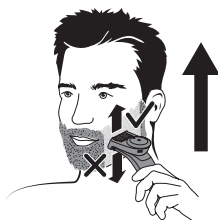

5. Switch off and clean the product after each use (see ,Cleaning').

6. To remove the comb, pull the back part off the product and then slide the comb off the blade.

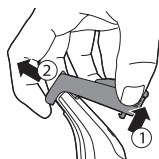


TRAVEL LOCK


The product is equipped with a travel lock function. You can use the travel lock if you are going to store the product for a longer time period or if traveling. The travel lock prevents the product from being switched on by accident.

Activating the travel lock

1. Press the on/off button for 5 seconds.

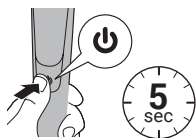


- When the travel lock is activated, the travel lock symbol will appear.

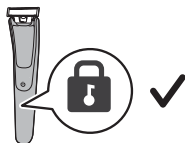

Deactivating the travel lock

1. Press the on/off button for 5 seconds.

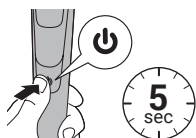

- Then the travel lock symbol switches off.

- The product is now ready for use.




Note: The product unlocks automatically when connected to an electrical outlet.

CLEANING

Clean the product after every use.


Never use scouring pads, abrasive cleaning agents or aggressive liquids such as gasoline or acetone to clean the product.



Do not tap the product or blade against a surface to remove hairs and water as this may cause damage to the product and blade. If the blade is damaged, replace immediately.

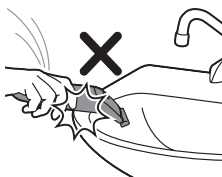

Never dry the blade with a towel or tissue, as this may cause damage.

Cleaning the product

1. Turn off the product. 
2. Remove the comb from the blade.
3. Blow off any hairs that have accumulated on the blade and/or comb.
4. Switch on the product briefly while rinsing the blade with lukewarm water.
5. Rinse the comb with lukewarm water.
6. Carefully shake off excess water and let all parts air dry completely.

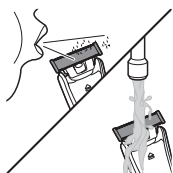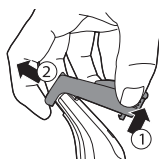

Cleaning reminder: After 30 minutes of use you may see a tap symbol blinking on your product as a reminder to clean it.

Note: The blade is fragile. Handle it carefully. Replace the blade immediately if it is damaged.

STORAGE

- Always attach the precision trimming comb on the blade to protect the blade from damage during traveling or storage.
- Be sure the product is turned off. Remove cord from outlet and the product before storing it in a safe, dry location where it will not be crushed, banged, or subject to damage.
- Do not wrap cord around the product when storing.
- Store cord in a safe location where it will not be cut or damaged.
- Do not place or store the product where it can fall or be pulled into a tub or sink, water or other liquid while plugged in.


REPLACEMENT

Replacing the blade

For optimal cutting and gliding performance, we advise you to replace the blade every 4 months or when it no longer provides the shaving or trimming results you expect. Depending on your usage behavior the exact lifetime of the blade could be longer or shorter. Similar to a manual blade, the blade becomes blunt over time, which results in increased hair pulling and reduced cutting performance.

Always replace the blade with original Mueller blade. (see 'Accessories').

1. Turn off the product.
2. Carefully hold the blade on both sides and pull it out.
3. To put the blade on, hold the new blade on both sides and press it onto the handle.

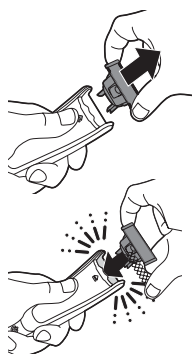

ACCESSORIES

Replacement blades may be purchased on our website www.muellerdirect.com

DISPOSAL

- This product contains a rechargeable lithium-ion battery which must be disposed of properly.



Contact your local town or city officials for battery disposal information. You can also call 1-800-822-8837 or visit www.call2recycle.org for battery drop-off locations.

- Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. For recycling information, please contact your local waste management facilities or visit www.muellerdirect.com

FULL TWO-YEAR WARRANTY

Mueller warrants this new product (except blade and comb) against defects in materials or workmanship for a period of two years from the date of purchase, and agrees to repair or replace any defective product without charge.

IMPORTANT: This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage or batteries.*

NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

In order to obtain warranty service, simply go to www.muellerdirect.com or call (888)632-9981 for assistance. It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty.

NOTE: No other warranty, written or oral, is authorized by Mueller.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you.

*Read enclosed instructions carefully.

Technical specifications

Model No.: UB110

Adapter input: 120-240V~50/60Hz

Motor voltage: 5V

Rated power: 8W

Charging time: 1 hour

Running time: 1 hour



2-Year Limited Warranty

This product is warranted to be free from defects in material and workmanship under normal use and service for 2 years from the date of original purchase with receipt. The manufacturer's obligation shall be limited to repairing or replacing, any part of the product that is defective. Such warranty shall not apply to damages resulting from accidents, abuse or misuse.



Your purchase comes with a 100% satisfaction guarantee from Müller

If you are not happy with the product for any reason, please contact us at support@muellerdirect.com or at **888-632-9981** with your feedback or questions, and we will do our best to make things right for you!



Müller USA

1714 Franklin St, Ste B3, Oakland, CA 94612

Telephone: (888) 632-9981

E-mail: support@muellerdirect.com

Web: www.muellerdirect.com